

Cleaning & Care

OF THE WOOD COMPONENTS

EX3



To keep the wood handles, knobs, levers & panels looking and working like new, always follow the cleaning and care instructions listed below. For safety, always turn the machine off at the main power switch when cleaning the exterior surfaces.

- Keep all wood components dry and away from harsh elements, such as sunlight, that can damage and fade the wood.
- Use a soft, dry cloth like microfiber to wipe the wood and avoid damages. For tougher messes, use a slightly damp towel, then immediately wipe with a soft dry cloth.
- Do not use chemicals or all-purpose cleaners, which can cause damage to the finish. Moisture and chemicals may cause the wood to warp or crack.
- When soaking group handles in descaler, do not allow wood to touch descaler.
- If the wood begins to look aged and dry, apply a wood protection agent into the wood with a clean, soft cloth.
- Allow the product to sink into the wood for at least five minutes, then wipe the remaining oil off with a dry cloth.



CREM[®]
EXPOBAR SINCE 1985



disavè[™]
espresso equipment suppliers